

AVALO BUMPER REPLACEMENT

Tools: Phillips Screwdriver (Cordless drill with magnetic phillips bit preferable.)
5/32" Allen wrench (5/32 Hex bit with Cordless drill preferable.)

1. Remove drawers. Lift tab on left and push tab down on the right side, and then pull the drawer out. For easier drawer removal empty drawers first.



A.



B.

2. Using a phillips screwdriver remove the top slide assembly on the replacement bumper side. There is one screw in the front (Picture A) and back (Picture B) of the slide. Hold onto the slide when removing the second screw. ****Be careful not to strip the screw head out. Use a #2 phillips screwdriver if screw will not un-tighten to loosen the screw.**



A.



B.

3. Remove the two screws holding the interior lock panel cover using a phillips screwdriver.



A.



B.

4. Using a 5/32 allen wrench remove the end panel screws. The screws will be tight. Picture A is the front screw and Picture B is the back screw. ****Screws may be phillips head. If so use the phillips screwdriver. **Remove items from the end panel before removing end panel screws.**



A.



B.

5. Carefully remove the end panel and set it aside.



A.



B.

6. Pull up on the broken bumper from one end and remove.




A.



B.

7. Align and snap on the replacement bumper onto the frame. Refer to pictures in step 6.


8. Set in the end panel and re-attach using the allen wrench.

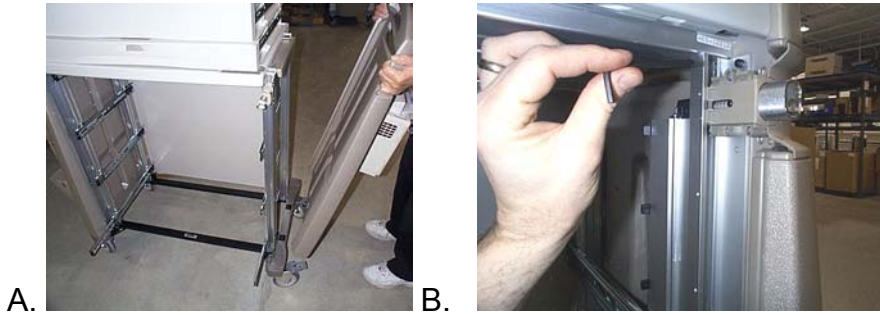

9. Re-install the interior lock cover using the phillips screwdriver.



10. Re-attach the slide assembly using the phillips screwdriver. See Pictures A and B for placement of the screw. Extend the slide and hold with one hand while attaching the slide to the cart.

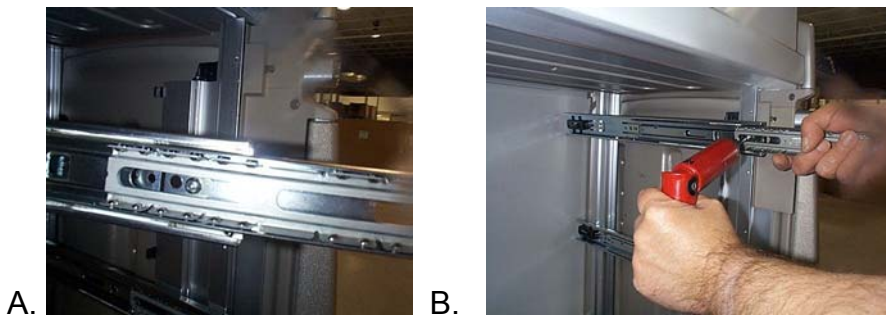

11. Re-set each slide as shown below. Push the slide (Picture A) in and pull the inside guide forward (Picture B). Align each side of the drawer with the slide assembly and gently push in. **Set cart against a wall or stationary object to hold the cart in place.

